



# The Little Oak Latch Company

Quality Handcrafted Wooden Latches

[www.littleoakcompany.co.uk](http://www.littleoakcompany.co.uk)

## Suffolk Latch Fitting Instructions

1. Mark a line 75mm from the edge of the door.
2. Drill 2 holes 14 mm diameter, centres 20mm apart, along this line. Clean out the hole using a chisel.
3. Position the latch so the lever is resting through the hole and is roughly level. Drill pilot holes and attach the latch using screws.

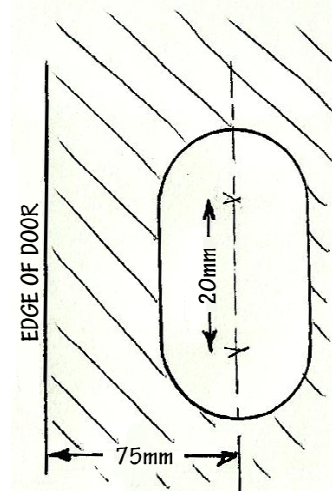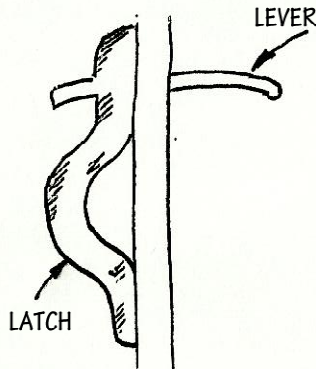

4. Position the latch bar on the other side of the door. It should rest on the lever and also extend over the edge of the door to fit over the keep. Screw.
5. Attach staple about 25mm from the edge of the door.
6. Attach the keep onto the door frame so that the latch bar slides over the keep when the door is closed.

